



Audi TT Coupé Audi TT Roadster

Quick reference guide



Dear Audi Driver,

This quick reference guide gives you a brief introduction to the main features and controls of your vehicle.

However, it cannot replace the Owner's Manual which contains important information and safety warnings.

We wish you safe and enjoyable motoring with your Audi.

AUDI AG



Locking and unlocking the vehicle

The central locking system locks and unlocks all the doors. It can be operated via the remote control or by turning the key in the lock.



Remote control keys

1 Unlocking button on vehicles with the security central locking feature

Press the button **once**: This will only unlock the driver's door.

Press the button **twice**: This will unlock both doors and the boot lid.

Open one of the doors or the boot lid within about 30 seconds, otherwise the vehicle will lock itself again automatically.

2 Unlocking button for boot lid

Press the button for at least 1 second.

3 Locking button

The turn signals flash once to confirm that the doors and boot lid are properly closed and locked.

Anti-theft alarm

The alarm system is automatically **set** when you lock the car, and **switched off** when you unlock the car with the remote control. If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered.

4 Folding out the master key

Press the release button.

Folding in the master key

Press the button and fold in the key.


Note: Press and hold the appropriate button on the remote control key to open or close all the windows automatically.

⚠ WARNING!

The doors and windows cannot be opened from inside the vehicle if it has been locked from the outside.

Filling the tank

Releasing the tank flap

Press the  switch in the driver's door to open the tank flap. Unscrew the tank cap and hook it onto the flap.

Fuel grade

The correct fuel grade for your vehicle is shown on the inside of the tank flap.

Note: The sticker listing the tyre pressures is located on the driver's door pillar.



Adjusting the seats

Manual seat adjustment

1 Folding down backrest

(only applies to Audi TT Coupé)

Slide the handle upwards and fold the backrest down to the front.

2 Adjusting angle of backrest

Lean forwards and turn adjuster wheel.

3 Adjusting seat height


Pull the lever up to raise the seat; press it down to lower the seat.

4 Adjusting lumbar support

Press the appropriate part of the switch.

5 Moving seat backwards or forwards

Lift the lever and move the seat into the desired position. Then release the lever and move the seat further until the catch engages.

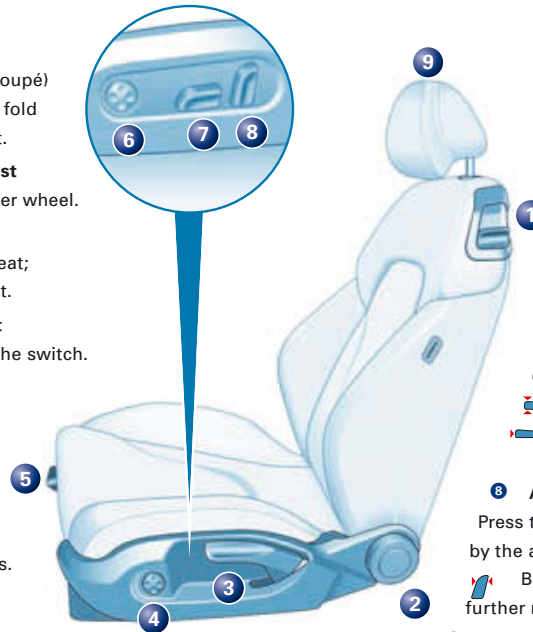

Electric seat adjustment

6 Adjusting lumbar support

Press the appropriate part of the switch.

7 Adjusting seat height and moving seat backwards or forwards

Press the switch in the direction indicated by the arrows:

To raise/lower the seat at the front

To raise/lower the seat at the rear

To raise/lower the seat
 To move the seat forwards/backwards

8 Adjusting backrest

Press the switch in the direction indicated by the arrows:

Backrest further upright/
 further reclined

9 Adjusting head restraints


Take hold of the head restraint with both hands and adjust the height as required.

Safety

Seat belts must be worn on every journey, even on short trips in town. This applies to the front and rear seats. To ensure that the seat belts, belt tensioners and airbags are fully effective, please note the following points:

Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm and sit in a normal upright position. The top of the head restraint should be at eye level or higher. Always keep your feet in the footwell.

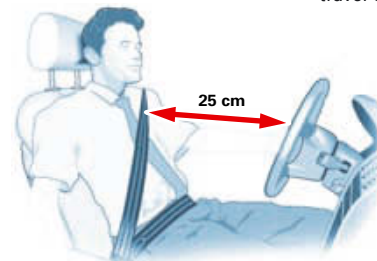

Safety of children in the vehicle

Children under 12 years of age should travel on the rear seat (only applies to Audi TT Coupé). They must be protected by a child restraint system which is correctly secured and is suitable for the child's height and weight. Child restraint systems must comply with the European standard ECE-R 44.

Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder, and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (*see illustration*).

WARNING!






















Please follow the instructions in the Owner's Manual and read the instructions provided by the child seat manufacturer.

Instruments



- 1 **Rev counter**
- 2 **Warning and indicator lamps**
- 3 **Coolant temperature gauge**
- 4 **Fuel gauge**
- 5 **Speedometer**
- 6 **Mileage recorder:**
 - Trip recorder (top)
 - Total mileage (bottom)
- 7 **Control button for**
 - **Resetting trip recorder**
Press the button until the display is reset to zero.
 - **Service indicator**
Pull the button. The remaining distance until the next service becomes due is displayed.
- 8 **Display for:**
 - **Warning symbols and auto-check control**
 - **Driver messages**
 - **Radio, CD and telephone**
 - **Outside temperature**
 - **On-board computer**
 - **Navigation system**
 - **Selector lever positions for S tronic**
 - **Menus**
- 9 **Control button for:**
 - **Auto-check control messages**
Press button twice with ignition switched on.
 - **Calling up driver messages briefly**
Press the button when a red warning symbol lights up. The messages remain in the display for about 5 seconds. The message can be called up once more if you press the button again.
 - **Setting speed warning 1**
Press button briefly when desired speed is reached. To clear the speed limit, press the button for at least 2 seconds.
 - **Setting digital clock/date display**
Keep pulling the button briefly until the desired display flashes. Turn the button to alter the time/date.
- 10 **Digital clock and date display/outside temperature display**

Warning and indicator lamps

	Audi magnetic ride		Brake pads worn ²⁾
	Loss of tyre pressure		Light sensor/rain sensor defective
	Tyre pressure too low ¹⁾		Adaptive light defective
	Engine management system ²⁾		Headlight range control defective ²⁾
	Power-operated soft top (only applies to Audi TT Roadster)		Check engine oil level (warning lamp lights up permanently)
	Electronic stabilisation program (ESP)		Engine oil sensor defective ²⁾ (warning lamp flashes)
	Emission control system		Washer fluid level low
	Main beam headlights		Cruise control system
	Rear spoiler		Airbag system ²⁾
	Turn signals, hazard warning lights		Alternator
	Fault in cooling system ¹⁾		Seat belt warning lamp
	Fuel level low		Fault in brake system ¹⁾ or handbrake applied
	Engine oil pressure too low ¹⁾		Anti-lock brake system ²⁾
	Bonnet open		Electro-mechanical power steering (loss of power) ²⁾
	Door/s open		Electro-mechanical power steering (failure) ²⁾
	Boot lid open		


Please refer to the Owner's Manual for an explanation of the additional symbols on models with the auto-check control function.

⚠ WARNING!

¹⁾ If one of these red symbols lights up while you are driving, stop the car immediately, switch off the engine and refer to the Owner's Manual.

²⁾ If one of these symbols lights up while you are driving, please contact a qualified workshop without delay.

Instruments and controls

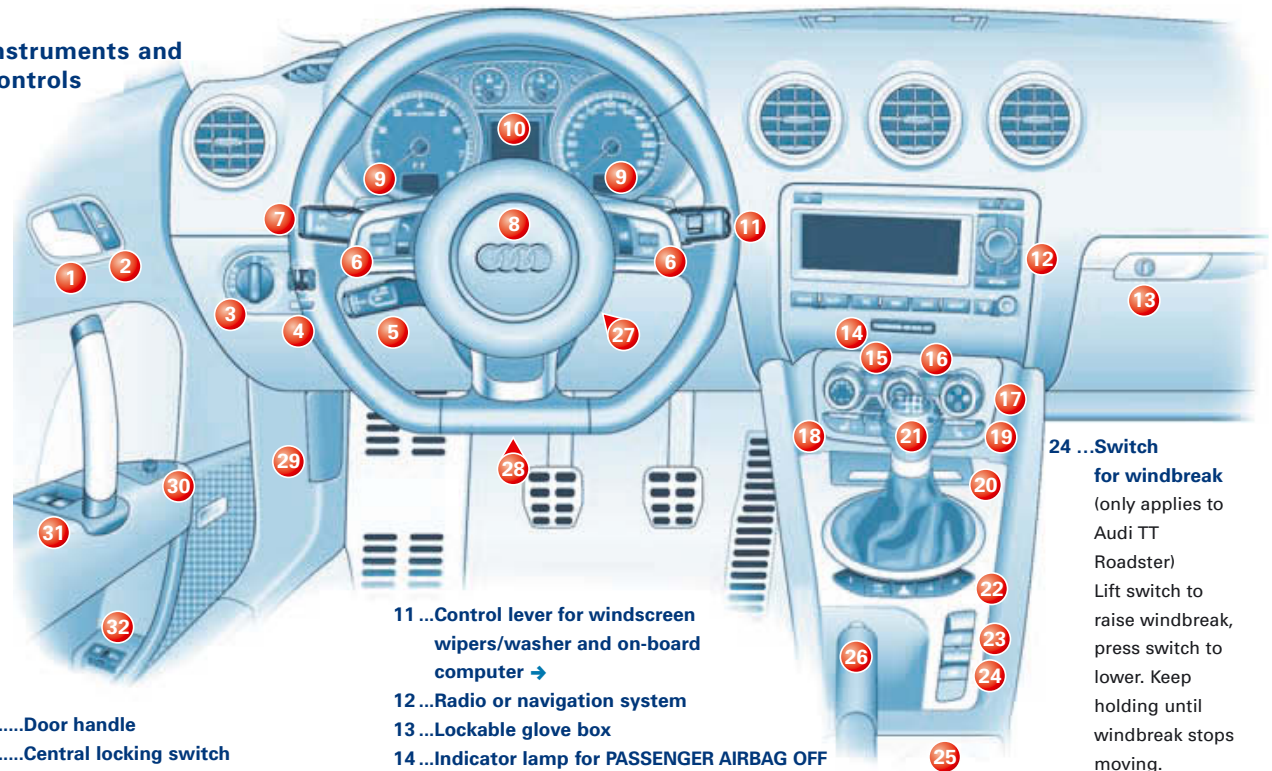

1Door handle

2Central locking switch

Press the appropriate symbol to unlock or lock the vehicle from the inside:



3Light switch →

4Thumbwheels for instrument lighting and headlight range control/coming home function button

5Control lever for cruise control system

Please refer to the Owner's Manual for operating instructions.

6Control switches on multi-function steering wheel →

7Turn signal and headlight dip lever →

8Horn

9tiptronic paddle levers

(Applies to S tronic only)

10Instruments and warning/indicator lamps

11 ...Control lever for windscreen wipers/washer and on-board computer →

12 ...Radio or navigation system

13 ...Lockable glove box

14 ...Indicator lamp for PASSENGER AIRBAG OFF

15 ...Defrost button for windscreen and side windows

16 ...Switch for rear window heating

17 ...Switches for air conditioner →

18 ...Button for driver's seat heating






19 ...Button for front passenger's seat heating

20 ...Ashtray, cigarette lighter/socket

21 ...Gear lever/selector lever

(on vehicles with S tronic) →

22 ...Controls for:

-  Activating and deactivating Audi magnetic ride
-  Switch for ESP (Electronic Stabilisation Program)
-  Switching hazard warning lights on and off
-  Extending rear spoiler manually
-  Tyre pressure monitoring

23 ...Soft top control switch →

(only applies to Audi TT Roadster)

24 ...Switch

for windbreak (only applies to Audi TT Roadster)

Lift switch to raise windbreak, press switch to lower. Keep holding until windbreak stops moving.

25 ...Cup holder

26 ...Handbrake

27 ...Ignition lock

28 ...Lever for adjustable steering column →

29 ...Bonnet release lever


Please read Owner's Manual

30 ...Electric adjuster for exterior mirrors →

31 ...Electric windows

Press or pull the switch as far as the first stop and hold it until the window has moved to the desired position. Press or pull the switch as far as the second stop to activate the "One-touch" function.

32 ...Unlock switches for:

-  Boot lid
-  Tank flap

→ Further information for these items is given on the following pages.

[30] Electric adjuster for exterior mirrors

Selector knob:



- 1 Left exterior mirror
- 2 Exterior mirror heating
- 3 Right exterior mirror
- 4 Folding out both exterior mirrors

Press the adjuster to move the mirror surface in the desired direction.

Note: The mirrors are heated automatically at low outside temperatures when the ignition is switched on.

[28] Lever for adjustable steering column

Push lever down and adjust position of the steering column as required. Then push the lever back up.



[3] Light switch



- 1 Off
- 2 AUTO

When the light switch is set to AUTO, the dipped beam headlights will be switched on and off automatically according to the outside light conditions.

- 3 Side lights
- 4 Dipped beam/main beam headlights
- 5 Front fog lights

Turn switch to position *dipped beam/main beam* 4 and then pull it out to the first stop.

- 6 Front fog lights and rear fog light

Turn switch to position *dipped beam/main beam* 4 and then pull it out to the second stop.

[7] Turn signal and headlight dip lever

- 1 **Right turn signals** (with ignition off: right parking light on)
- 2 **Left turn signals** (with ignition off: left parking light on)
One-touch signalling: Briefly move the lever up/down (turn signals will flash three times).
- 3 **Main beam headlights**
- 4 **Headlight flasher**



[6] Control switches on multi-function steering wheel

The multi-function steering wheel offers fast and simple control of the audio, TV and telephone functions via the speech control system. Please refer to the Owner's Manual for operating instructions.

[11] Control lever for windscreen wipers/washer and on-board computer

- 0 **Wipers off**
- 1 **Brief wipe**
- 2 **To activate intermittent wipe/rain sensor**
Move control **A** to set sensitivity level of rain sensor (wiper delay intervals).
- 3 **Slow wiper speed**
- 4 **Fast wiper speed**
- 5 **Automatic wash and wipe**
Pull lever towards you and hold.

Controls for on-board computer

Press the top or bottom of rocker switch **B** repeatedly to display the various computer functions in turn. Press and hold RESET button **C** to return the current display to zero.

RESET button

Press the RESET button **C** repeatedly to switch between the information supplied by the on-board computer, the navigation system and the main menu display.

[23] Soft top control switch (only applies to Audi TT Roadster)



Opening the soft top

Pull up and hold the switch until the soft top is fully open.

Closing the soft top

Press and hold the switch until the soft top is completely closed.

Notes: If the control switch is released during the opening/closing operation, the soft top will stop moving. The soft top is completely open/closed when the warning lamp in the instrument cluster goes out. The soft top can only be opened or closed when the ignition is switched on.

For information on how to open/close the soft top manually please refer to the Owner's Manual.

[21] Selector lever (on vehicles with S tronic)

Selector lever positions

- P** Parking lock **R** Reverse gear
- N** Neutral **D** Drive
- S** Sport

To move the selector lever out of position **P** or **N**, or into position **P** or **R**, press the interlock button on the selector lever handle and the brake pedal simultaneously.


Note: Use the foot brake to hold the vehicle when stationary with the engine running (in all selector lever positions other than **P**).

⚠ WARNING!
Do not move the selector lever to positions **P** or **R** when the vehicle is moving.



Manual gear selection (tiptronic)

The tiptronic program enables you to change gear manually. From position **D**, push the selector lever to the right. Push the selector lever forwards briefly to shift up a gear, or pull the lever back to shift down a gear.

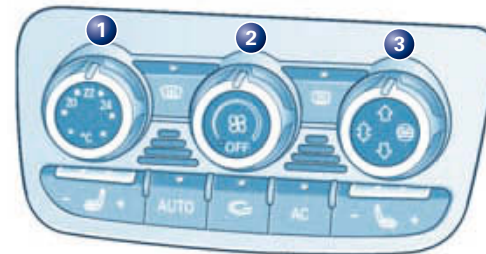

[17] Switches for air conditioner

- 1 **Rotary control for temperature selection**
- 2 **Rotary control** (For switching on/off and regulating blower speed)
- 3 **Rotary control for air distribution**
 - AUTO** **Automatic mode** (Set the desired temperature and press the button)
 - ↻** **Air recirculation mode** (Circulates and filters the air in the interior of the vehicle)
 - AC** **AC mode** (Activates/deactivates air cooling)